

Quantum Tall Foot Kit




The Quantum Tall Foot Kit replaces the standard feet supplied in the carton, raising the product further up off the floor in order to clear taller skirting boards.


This removes the need for a plinth, or the modification of the skirting board itself.

Dimensions

Standard Foot

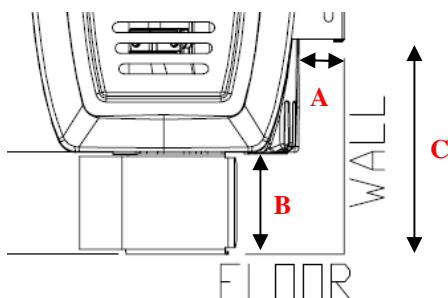

Tall Foot Kit

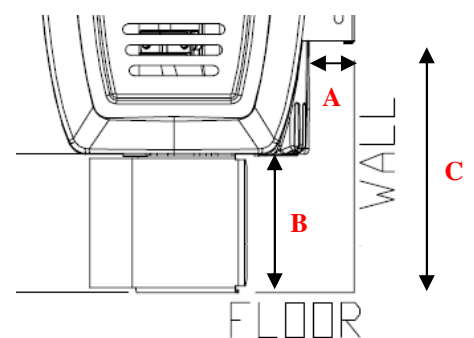

Type	A	B	C
Standard Foot	28mm	60mm	123mm (4.8in)
Tall Foot Kit	28mm	140mm	203mm (8in)

Packaging Details

Model No.	Length	Height	Depth	Barcode
QFEET	225mm	203mm	132mm	5011139080479