



# **EH0369**

## **2kW Patio Heater**




- 3 Heat settings**
- Pull-cord switch**
- Pole mounted**
- Height-adjustable stand**
- Suitable for outdoor use**
- Adjustable angle**

# IMPORTANT


## Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference.


## ASSEMBLY

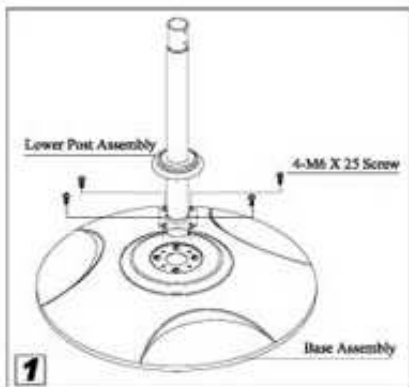


Insert the lower section in to the base. Fix tightly using the four M6×25 mm screws. Stand the base on the floor.

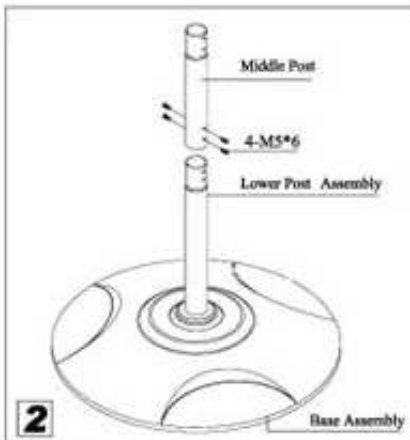


Insert the middle section of the pole into the lower section. Rotate the pole until both holes align with the holes in the lower section. Fix using two M5×6 mm screws.

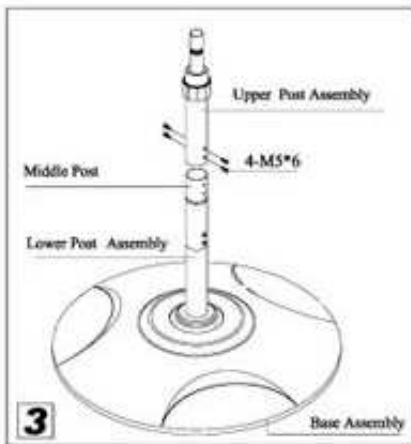

Repeat with the upper section of the pole.

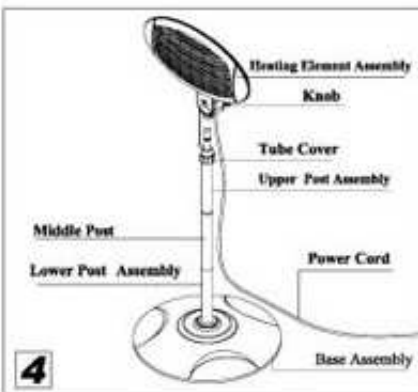

Attach the heating element assembly to the top of the pole. Clamp tightly using the fixing knob.

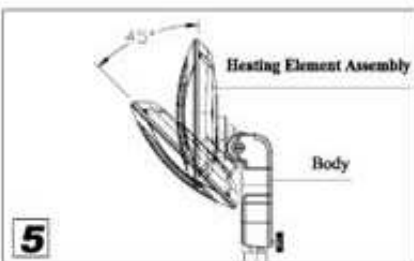

Adjust the angle of the heating element assembly to direct the heat where required.

## **OPERATION**

- Plug the mains lead into a 13 Amp mains socket that is protected by a 30mA Residual Current Device (RCD). Never use equipment outdoors that is connected to a socket that is not protected by an RCD.
- If connecting via an extension lead, make sure that the lead is rated at 10 Amps or more, and that it is fully unwound.
- Switch the appliance on at the mains socket.
- Pull the cord-operated switch to select the required operation:

Figure "1" displayed = Low Heat (650 W)

Figure "2" displayed = Low Heat (1350 W)

Figure "3" displayed = High Heat (2000W)

- Do not touch the grille when the appliance is in operation, because it will be hot and may cause burns.
- Unplug the appliance from the mains when not in use.
- To adjust the angle, switch off the appliance and allow it to cool for 15 minutes. Slacken the pivot screw, and adjust the reflector to the preferred angle. Re-tighten the screw. The appliance may now be switched on.
- To adjust the height, loosen the black locking nut at the top of the pole, and slide the telescopic section of the pole to the preferred height. Re-tighten the black locking nut.

## **PAT TESTING.**

When used in an office environment, this product must be safety-tested yearly by a qualified electrician (PAT Tested) in order to comply with the Electricity at Work Regulations.

We recommend that it is PAT tested regularly when used in a domestic environment.

## GENERAL SAFETY REQUIREMENTS

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy.

For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 years.

It is recommended that all building be fitted with smoke alarms (it is mandatory for new buildings).

## PRODUCT SAFETY

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- Ensure that curtains and other flammable materials are at least 900 mm (3') from the top of the appliance.
- Do not use unless correctly installed.
- Do not cover when in use. This symbol shown on the casing of the appliance means that the appliance should not be covered when in use.
- Do not place the mains lead beneath a carpet or rug.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Do not insert any object into the appliance through the grilles. This may damage the appliance or result in overheating or electric shock.
- If used outdoors, the appliance must be connected via a Residual Current Device (RCD) rated at 30 mA or less.



- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- Not suitable for use in boats, caravans or similar locations.
- This appliance must not be connected to a timer or other type or programmable switch (a fire hazard exists if the appliance is covered when the timer switches it on)
- Do not touch the fireguard when the appliance is in use, as it is hot and may cause burns.
- The fireguard of this appliance is intended to prevent direct access to the heating elements and must be in place when the appliance is in use.
- The fireguard does not give full protection for young children and for infirm persons.

## **OPERATING COSTS**

At time of going to press, the average cost of electricity is £0.11 per unit (kilowatt-hour). The amount you are being charged will be shown on your electricity bill.

At this cost, the appliance will cost £0.07 per hour to run on the "low heat " setting, £0.13 per hour to run on the medium heat setting, and £0.22 per hour to run on the "high heat" setting.


## **MAINTENANCE**

Before cleaning, turn the appliance off, and disconnect from the mains supply. The appliance may then be cleaned using a damp cloth with a drop of washing-up liquid to remove any dust or dirt from the case. Do not use stronger detergents or solvents as these may damage the paint finish.

Using a dry 1" (25mm) paint-brush, remove any dust from the grilles.

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre. If the mains

plug needs to be replaced, proceed as follows:

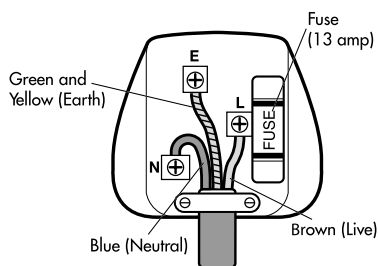

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Connect the green/yellow wire to the terminal labelled with the earth symbol or "E".
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.

## STORAGE

When not in use, or during inclement weather, the black fabric dirt and dust protector should be deployed. Always make sure that the appliance is unplugged and cannot be accidentally switched on when the dirt and dust protector is being used.

## DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

## TECHNICAL SPECIFICATION

Dimensions:	480×460×1730-2060 mm
Weight:	9 kg
Power supply:	230 V ~
Power consumption:	2000 W
Operating current:	8.7 A

## SERVICE WARRANTY

Prem-i-Air guarantees the product free from defects in materials and workmanship for a period of twelve months.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Prem-i-Air Appliances Ltd.,  
Lancots Lane, Sutton,  
St. Helens, Merseyside.  
WA9 3EX

**website:** [www.prem-i-air.com](http://www.prem-i-air.com)